


PW9219

NO.	DESCRIPTION
1	SCREW
2	HOSE HOOK
3	HANDLE
4	CAPACITOR
5	SWITCH BOX
6	SCREW
7	DETERGENT TANK
8	SWITCH
9	CORD HOOK
10	LANCE HOOK
11	SPRAY GUN
12	LANCE
13	HIGH PRESSURE HOSE
14	LABEL
15	WATER INLET CONNECTOR
16	WHEEL
17	HOUSING
18	WHEEL COVER
19	OUTLET WATER COVER
20	PUMP + MOTOR
21	DAMPING BLOCK
22	INLET WATER COVER
23	CORD & PLUG
24	HOUSING COVER

ST20120109

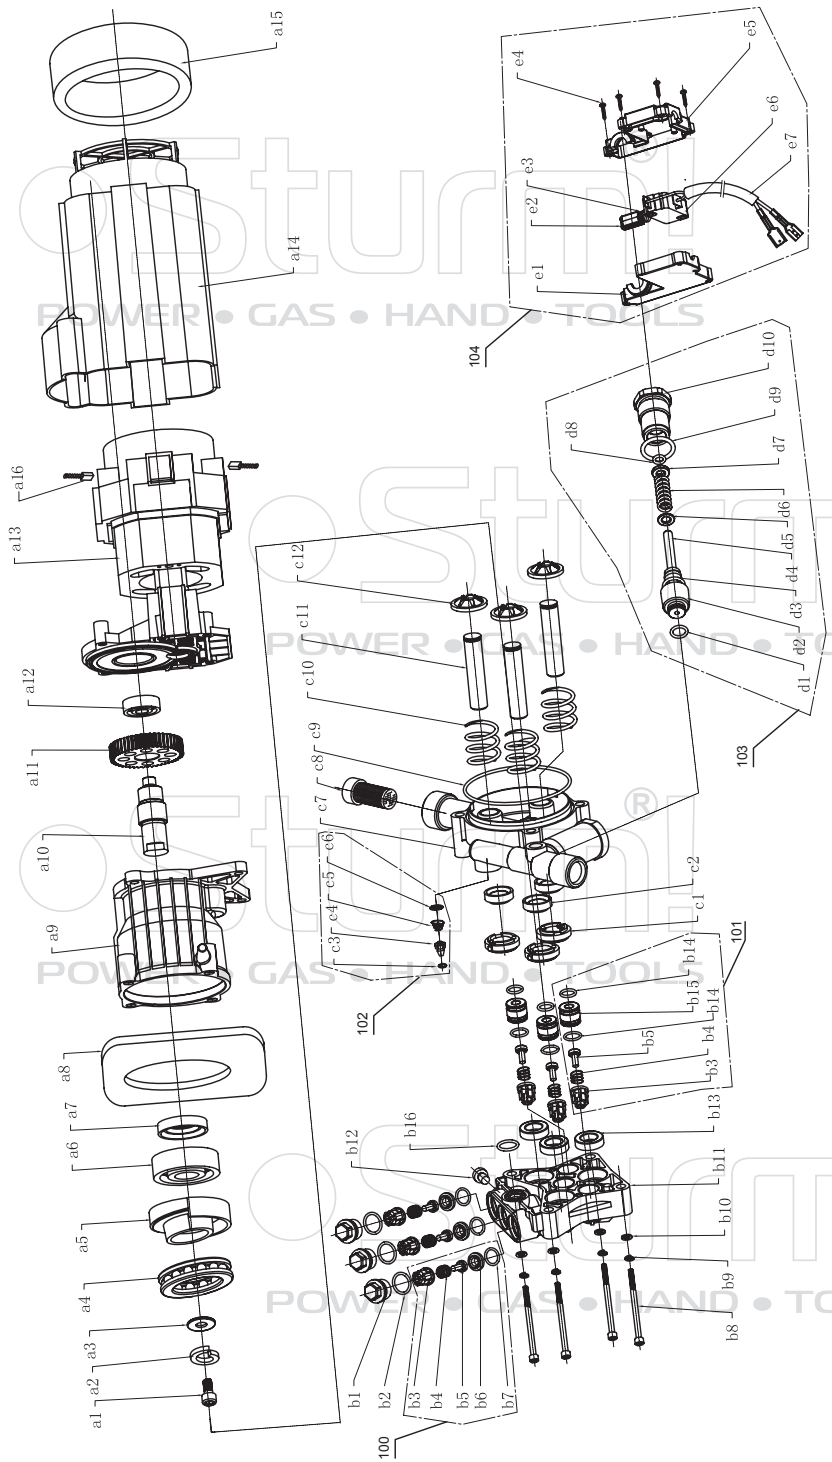

PUMP FOR PW9219

NO.	DESCRIPTION	NO.	DESCRIPTION
a1	SCREW	c2	PISTON OIL SEALING
a2	SPRING WASHER	c3	O RING
a3	FLAT WASHER	c4	MAIN VALVE CORE
a4	THRUST BALL BEARING	c5	TOWER SPRING
a5	WOBBLE DISC	c6	SPRING BASE
a6	BEARING 6303Z	c7	PUMP BODY
a7	OIL SEALING	c8	WATER INLET FILTER
a8	FRONT MOTOR FILTER	c9	O RING
a9	OIL TANK	c10	PISTON SPRING
a10	GEAT SHAFT	c11	PISTON
a11	GEAR	c12	SPRING CHUCK
a12	BEARING 629Z	d1	O RING
a13	MOTOR	d2	VALVE COVER
a14	MOTOR COVER	d3	O RING
a15	BACK MOTOR FILTER	d4	VAVLE CORE
a16	CARBON BRUSH	d5	STOP RING
b1	VALVE NUT	d6	SPRING
b2	O RING	d7	BRASS WASHER
b3	VALVE SUPPORT	d8	O RING
b4	VALVE SPRING	d9	O RING
b5	VALVE CORE	d10	SCREW NUT
b6	VALVE BASE	e1	MICRO SWITCH LOW COVER
b7	O RING	e2	MICRO SWITCH NOB
b8	SCREW	e3	SPRING
b9	SPRING WASHER	e4	SCREW
b10	FLAT WASHER	e5	MICRO SWITCH UP COVER
b11	PUMP HEAD	e6	MICRO SWITCH
b12	SCREW	e7	MICRO SWITCH CORD
b13	Y RING	100	OUTLET ONE WAY VALVE
b14	O RING	101	INLET ONE WAY VALVE
b15	INLET VALVE BASE	102	MAIN ONE WAY VALVE
b16	O RING	103	OVER FLOW VALVE
c1	SEALING SUPPORT	104	MICRO SWITCH ASSEMBLY

ST20120109