



PW9220

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER HOUSING	37A	GUARD SLEEVE
2	TAPPING SCREW	38A	WATER SEAL
3	CAPACITOR	39A	PUMP BODY
4	CAPACITOR BASE	40A	WATER OUTLET
5	SWITCH FRAME	41	"O" RING
6	WATER PROOF COVER	42A	CHECK VALVE "O" RING
7	SWITCH	43A	CHECK VALVE BASE
8	SWITCH BASE	44A	CHECK VALVE "O" RING
9	BOLT	45A	CHECK VALVE BOLT
10	PRESSING PLATE	46A	CHECK VALVE SPRING
11	TAPPING SCREW	47A	CHECK VALVE MANDRIL
12	CORD CLAMP	48A	CHECK VALVE BRACKET
13	TAPPING SCREW	49	BOLT
14	CORD CLAMP	50	SPRING WASHER
15	WHEEL	51	"O" SEAL RING
16	DOWN HOUSING	52A	WATER INLET
17	TAPPING SCREW	54	"O" SEAL RING
18	INSERT SHEET	55	FLOOD VALVE SLEEVE
19	CORD SLEEVE	56	FLOOD VALVE STEM
20	CORD & PLUG	57	FLOOD VALVE SPRING
21	TAPPING SCREW	58	TRANSITION SLEEVE
22	HANDLE	59	"O" SEAL RING
23	MOTOR	60	"O" SEAL RING
24	"O" SEAL SHEET	61A	COPPER BOLT
25	CAM	62A	SWITCH COVER
26	SPRING WASHER	63A	SWITCH BOX
27	BOLT	64A	SPRING
28	BEARING SHEET	65	SELF-CONTROL SWITCH
29	BEARING	66A	CONTROL LEVEL
30	BEARING SLAP	67	TAPPING SCREW
31	SPRING WASHER	68	FILTER NET
32	PLUNGER	69	COVER
33	SPRING	101	CHECK VALVE ASSEMBLY (43A+44A+...48A)
34A	BOX	102	FLOOD VALVE ASSEMBLY (54+55+...61A)
35	BOLT	103	OIL SEAL BRACKET
36A	OIL SEAL	201	"O" SEAL RING

ST20120803-03