



RH252

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	TOP COVER	34	BOLT	67	FRONT FIXING COVER
2	LOCKING BOLT	35	INDUCTANCE WIRING SHEATH	68	SPRING
3	CIRCLIP	36	SWITCH COVER	69	ORIENTATION SHEATH
4	BALL BEARING 6301	37	CAPACITANCE	70	SECOND STRIKER
5	BOLT	38	SWITCH	71	O-RING
6	MOTOR BOTTOM COVER	39	SWITCH CHAMBER	72	SPRING
7	FAN	40	LOCKING NUT	73	SADDLE GASKET
8	CRANK SHAFT CASE	41	RIGHT SIDE PENDULUM	74	POLE PIN
9	MOTOR HOUSING	42	TAP BOLT	75	BOLT
10	STATOR	43	SHEATH RING	76	TOOL HOLDER
11	STATOR HOLDING PLATE	44	PIN	77	PIN AXIS
12	TAP BOLT	45	TAP BOLT	78	RUBBER RING
13	STATOR LOCKING PLATE	46	SWITCH CHAMBER COVER	79	TOOL HOLDER SOCKET
14	ROTOR	47	CABLE NIP	80	LEFT SIDE PENDULUM
15	CARBON BRUSHES	48	TAP BOLT	81	LEFT HANDLE
16	SPRING WASHER	49	BOLT	82	TOOL HOLDER
17	BOLT	50	SPRING WASHER	83	BOLT
18	RIGHT SIDE BOTTOM COVER	51	RIGHT HANDLE	84	ANTI-VIBRATION PLATE
19	TAP BOLT	52	SWITCH LEVER	85	NUT
20	INDUCTANCE COVER	53	SWITCH LEVER HOLDING	86	GEAR CASE
21	INDUCTANCE	54	TAP BOLT	87	SEAL WASHER
22	STATOR WIRING SHEATH	55	CORD SHEATH	88	BIG GEAR
23	AIR BAFFLE	56	PLUG	89	ADJUSTMENT GASKET
24	INDUCTANCE HOLDING	57	BOLT	90	BALL BEARING 6205
25	OIL SEAL COVER	58	CYLINDER CASE	91	SPLINE AXIS
26	SEAL RING	59	O-RING	92	MEDIUM GEAR
27	BEARING INNER RING	60	RAM	93	NEEDLE BEARING ?
28	CRANK SHAFT	61	PISTON	94	MEDIUM AXIS
29	ROLLER BEARING ?	62	CONNECTOR RING	95	FELT RING SEAL
30	OIL SEAL	63	PISTON PIN	96	MOTOR COVER
31	ROLLER	64	CONNECTOR	97	BOLT
32	CIRCLIP	65	OUTER RING		
33	SPLINE CUFF	66	FRONT FIXING SEAL RING		

RU70128-1

Sturm!
Germany