



## SG9670P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT DECORATIVE BLOCK	25	CAP NUT
2	HOUSING	26	CHECK VALVE SEAT
3	O RING	27	CHECK VALVE
4	MOTOR ASSEMBLY	28	CASE AIRPROOF RING
5	GUN SEAT LOCK KNOB	29	SUCKER
6	PIN	30	VESSEL
7	SPRING	31	RIGHT DECORATIVE BLOCK
8	FIXED BLOCK	33	SCREW ST3*14
9	SCREW ST3*6	35	SCREW ST4*12
10	MOTOR SEAT	36	CAPACITOR
11	ADJUST KNOBS	37	SWITCH
12	ADJUST KNOBS PIN	38	SWITCH MANDRIL
13	ADJUST KNOBS SPRING	39	SPRING
14	TRIGGER	40	CLEANING BRUSH
15	O RING	41	NOZZLE CLEANING NEEDLE
16	GUN SEAT	42	WIRE COMPONENTS
17	SPRING	43	TERMINAL BLOC
18	O RING	44	CORD ANCHORAGE
19	VALVE NEEDLE	45	CABLE PROTECTOR
20	NOZZLE Ø2.6	46	CABLE
20-1	NOZZLE Ø2.2	47	BOTTOM SEAT
20-2	NOZZLE Ø1.8	48	SCREW ST3*10
20-3	NOZZLE Ø1.5	49	WIND SEAT
21	CHANGE NOZZLE FLOATING BLOCK	50	FILTER NET
22	LEAF SPRING	51	REAR COVER
23	CHANGE NOZZLE	52	VISCOSITY MEASURING CUP
24	WIDTH CONTROL BUTTON	53	ADJUSTABLE RING

UK-ST20200213

Sturm!