



# TC9824U

| NO | DESCRIPTION         | NO | DESCRIPTION        | NO | DESCRIPTION       | NO  | DESCRIPTION          |
|----|---------------------|----|--------------------|----|-------------------|-----|----------------------|
| 1  | rubber foot         | 29 | washer             | 57 | moving shaft      | 85  | slide block          |
| 2  | nut                 | 30 | nut                | 58 | bearing 609RS     | 86  | right support        |
| 3  | right foot          | 31 | screw              | 59 | moving box        | 87  | nut                  |
| 4  | auxiliary worktable | 32 | motor              | 60 | nut               | 88  | pointer              |
| 5  | adjust knob         | 33 | motor support      | 61 | handle            | 89  | chain                |
| 6  | sink                | 34 | moving shaft       | 62 | handle cover      | 90  | water pipe           |
| 7  | locking knob        | 35 | plane washer       | 63 | screw             | 91  | pump                 |
| 8  | screw               | 36 | left support board | 64 | inner guard       | 92  | position nail        |
| 9  | washer              | 37 | nut                | 65 | screw             | 93  | switch box pad       |
| 10 | left foot           | 38 | nut                | 66 | anti-water washer | 94  | soft tube            |
| 11 | left wheel support  | 39 | plane washer       | 67 | inner flange      | 95  | switch               |
| 12 | screw               | 40 | locking knob       | 68 | blade             | 96  | switch box           |
| 13 | right wheel support | 41 | screw              | 69 | outer flange      | 97  | screw                |
| 14 | wheel axle          | 42 | adjust block       | 70 | nut               | 98  | capacitor clamp      |
| 15 | wheel               | 43 | chain connection   | 71 | outer flange      | 99  | capacitor            |
| 16 | plane washer        | 44 | screw              | 72 | screw             | 100 | cable                |
| 17 | cotter              | 45 | pointer board      | 73 | press board       | 101 | screw                |
| 18 | anti-loose nut      | 46 | locking nut        | 74 | screw             | 102 | switch box cover     |
| 19 | adjust foot         | 47 | beam               | 75 | screw             | 103 | switch box cover pad |
| 20 | nut                 | 48 | screw              | 76 | guide ruler1      | 104 | screw                |
| 21 | locking nut         | 49 | pointer            | 77 | guide ruler2      | 105 | connection piece     |
| 22 | connection board    | 50 | screw              | 78 | screw             | 106 | screw                |
| 23 | worktable 1         | 51 | base               | 79 | guide slot        | 107 | cable fixer          |
| 24 | worktable 2         | 52 | screw              | 80 | angle ruler       | 108 | chain                |
| 25 | screw               | 53 | screw              | 81 | locking ruler     | 109 | small spanner        |
| 26 | screw               | 54 | spring washer      | 82 | press board       | 110 | big spanner          |
| 27 | nut                 | 55 | plane washer       | 83 | nut               | 111 | spring washer        |
| 28 | anti-water board    | 56 | plane washer       | 84 | locking knlb      |     |                      |