

WM1921

Part List LT03A

No.	Name (specification)	No.	Name (specification)
1	guide pole (2)	16	locating ring
1A	screw arbor	17	round track
2	radial arm	18	round track
3	pole	19	screw arbor
4	screw arbor (3)	20	micro-adjust screw base
5	presser	21	support base
6	locate plate	22	presser
7	locater	23	pole (2)
8	presser case	24	slider
9	drill bench	25	connect plate
10	round track (2)	26	screw (5)
11	handle (2)	B1	hand wheel B10x80
12	presser (4)	B2	cross handle 8x40 (4)
13	press case (4)	B3	handle case BM10x50 (2)
15	sliding base	B4	copper screw M6x16

Part List LT03B

No.	Name (specification)	No.	Name (specification)
1	guide pole (2)	9	screw
2	screw arbor (3)	10	fence
3	locating ring	11	hood
4	guide track (2)	12	mic-adjust
5	hood	13	screw arbor
6	connect plate	14	sliding base
7	drilling bench	B1	cross knob 8x40 (4)
8	presser	B2	copper screw M6x16

Part List LT04

No.	Name (specification)	No.	Name (specification)
1	splitter	23	hood pole (2)
2	saw table	24	limit block (2)
3	saw cover	25	saw table base
4	hood	26	distance case (4)
5	hood	27	track base (2)
6	handle	28	knob bolt
7	roller (4)	29	locking case
8	press case (4)	30	sawing supporter
9	press case (2)	31	locking nut
10	roller supporter (2)	32	sawing pole
11	locker (2)	33	saw table base
12	cross-cutting table	34	nut
13	ruler	35	spacer
14	locating plate	36	saw table assist pole
15	locating pole	37	pole
16	screw arbor (2)	38	U-plate
17	index	39	distance case
18	index base	40	hood
19	roller supporter	B1	adjustable locking knob BM8x63x32
20	presser (2)	B2	single-row radial ball bearing 80100 (2)
21	cross-cutting track	B3	cross knob 8x40 (2)
22	hood		

Part List LT05

No.	Name (specification)	No.	Name (specification)
1	locating plate	3	rabbet cutting base
2	rabbet-cutting table	4	rabbet cutting pole