


WM1922 LT04

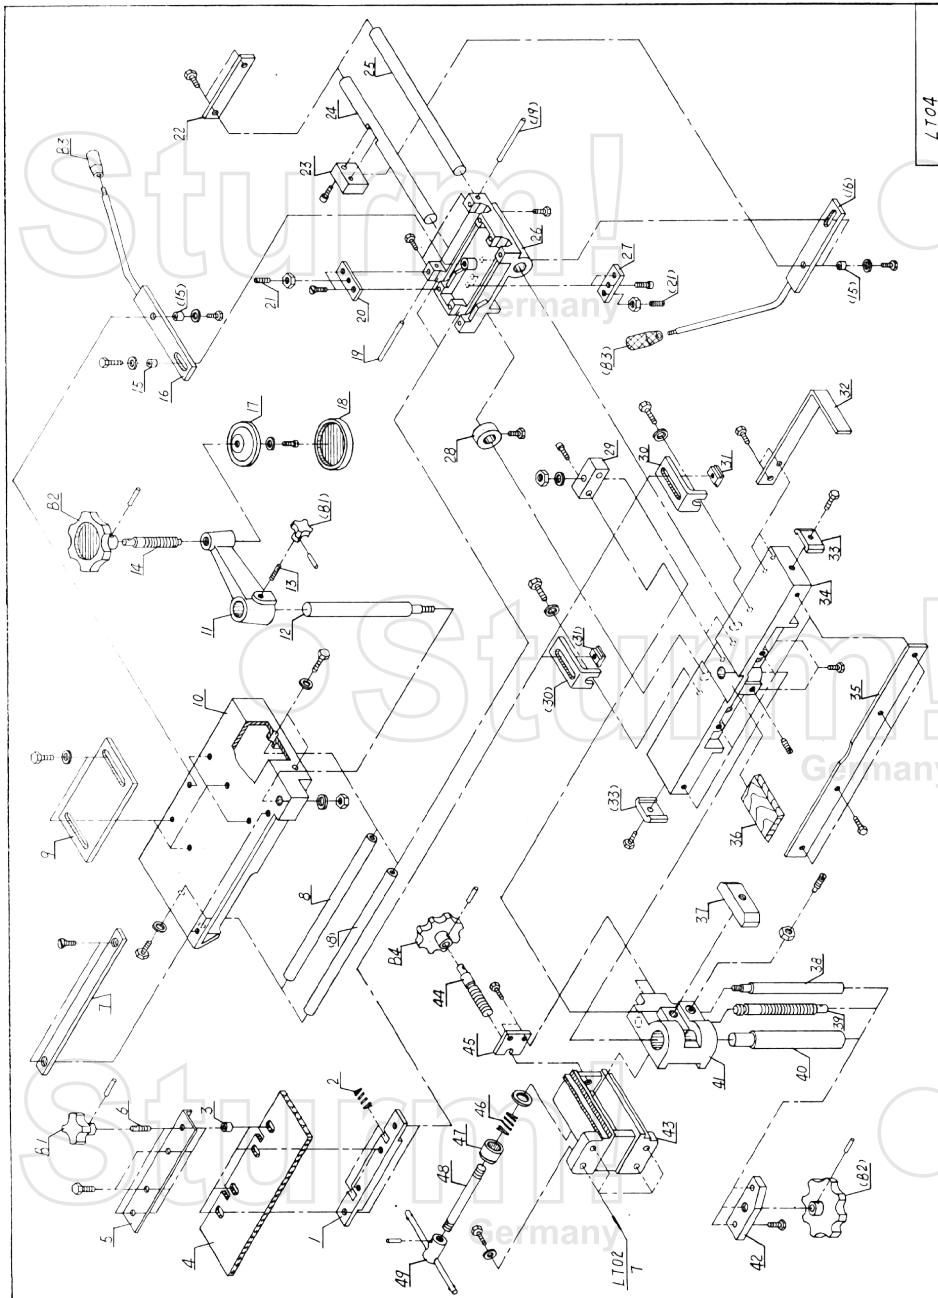

WM1922 Part List LT04

NO	DESCRIPTION	NO	DESCRIPTION
1	PLATE BASE	28	LOCATING RING
2	SPRING (2)	29	GUIDING ROD BASE
3	BUSH (4)	30	BENDING PLATE (2)
4	PUSH PLATE	31	T-SHAPE NUT
5	BENDING PLATE	32	STAND
6	SCREW ARBOR (2)	33	PRESSER (2)
7	LOCATING PLATE	34	MILLING BENCH
8	ROUND TRACK (2)	35	BACK PLATE
9	BACK PLATE	36	WOOD PAD
10	DRILLING BENCH	37	PRESSER
11	ARM	38	GUIDING ROD
12	POLE	39	SCREW ARBOR
13	SCREW ARBOR	40	POLE
14	SCREW ARBOR	41	SLIDER
15	BUSH (4)	42	CONNECTOR
16	HANDLE (2)	43	STAND
17	PRESSER	44	SCREW ARBOR
18	PRESS CASE	45	OPEN-ENDED SCREW ARBOR BASE
19	POST ROD (2)	46	SPRING
20	PRESSER (4)	47	BUSH
21	SCREW (5)	48	SCREW ARBOR
22	CONNECT PLATE	49	KNOB NUT
23	BASE	B1	KNOB 8X40 (3)
24	ROUND TRACK	B2	HAND WHEEL B10X80 (2)
25	ROUND TRACK	B3	KNOB CASE BM10X50 (2)
26	SLIDER	B4	HAND WHEEL B8X63
27	PRESSER		

WM1922 Part List LT07

NO	DESCRIPTION
1	DOOR
2	FRONT FRAME
3	STAND (2)
4	BOTTOM PLATE
5	BACK FRAME
6	COVER